



Applications


Our Cooker Stability Chains are used for securing gas and electric cookers, preventing the appliance from tipping forward. This product can also be used for a range of other items such as holding a coat rack, affixing dustbins to the wall, holding bookshelves and garden gates. Supplied with chain, screws, wall plugs and hook, an easy installation makes this an ideal product for around the home and garden.

Features

- ~ Manufactured from high quality materials
- ~ All parts supplied in a bag
- ~ Easy to fit
- ~ Supplied with snap hook for easy release
- ~ Lots of uses around the home and garden
- ~ No accidents with small children or elderly



Dimensional Data

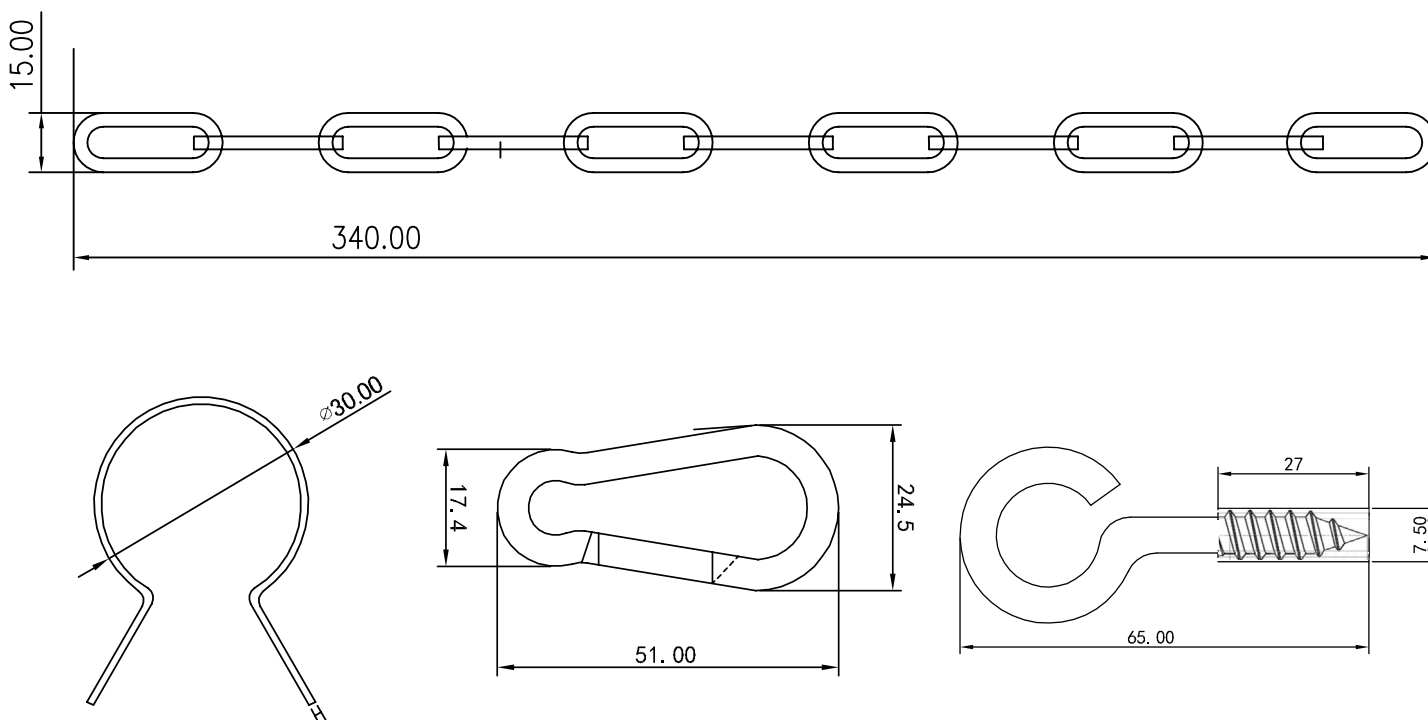

Technical Data

Material	Metal
Chain Length	400mm [16"]
Product Codes	364283