



IMPORTANT NOTES


Before installation flush supply pipes and ensure they are clean and free from debris.

Install the solenoid valve and the DC pipe interrupter as high up as possible to provide the longest possible length of pipe to the spreader. (1m minimum)

Use a low restriction spreader with good flow rate.

Minimise bends in the pipe work between the pipe interrupter and spreader.

1 CALIBRATE FLOW RATE (IF REQUIRED)

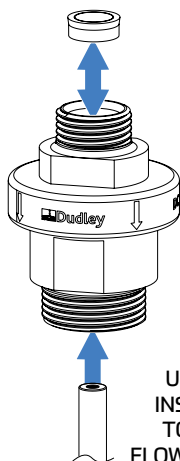

USE BLUNT
INSTRUMENT
TO REMOVE
FLOW REGULATOR

LOW FLOW

HIGH FLOW



BROWN
3 LPM
(FACTORY
SET)



GREY
4 LPM



YELLOW
5 LPM

