


IMPORTANT NOTES

Before installation flush supply pipes and ensure cistern is clean and free from debris.


No sealing compound, paste, flux or solvent to be used in contact with plastic or rubber surfaces to avoid damage. Rubber washers will provide adequate seal. PTFE tape may be used on threads. No chemical block/additive to be used in this cistern.

Do not over-tighten plastic fasteners. Hand tight + $\frac{1}{4}$ turn is recommended and should provide an adequate seal.

1

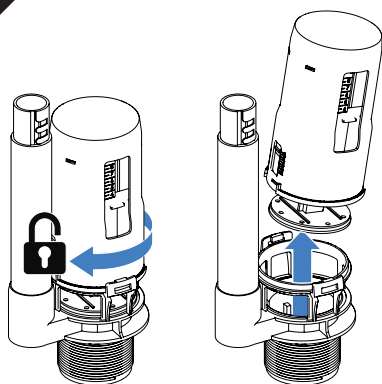


2a SPEC 1...

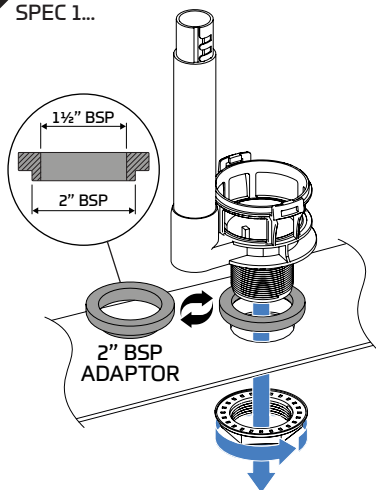

2b

SPEC 2...

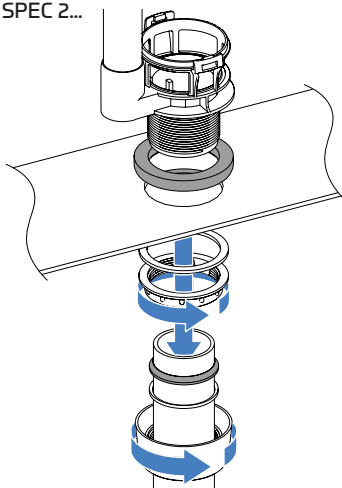

3

